




USER'S INSTRUCTION MANUAL

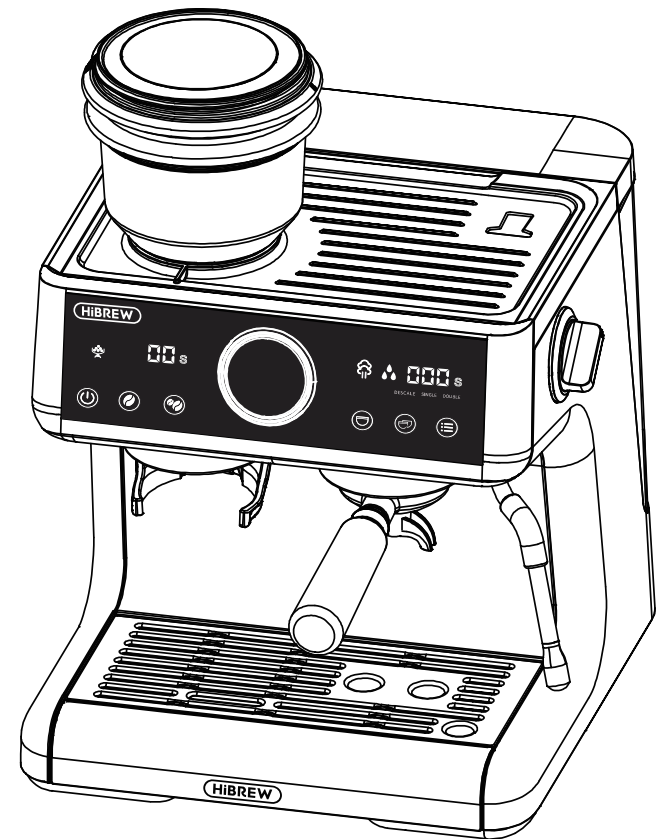

SKU / H7A

Product name: Barista Duo Grind & Brew Coffee Machine

SKU: HiBREW H7A

READ INSTRUCTION CAREFULLY: Read and follow all instructions. Keep instructions in a safe place for future reference. Do not allow anyone who has not read these instructions to assemble, adjust or operate the appliance.

PLEASE READ AND KEEP THESE IMPORTANT SAFETY INSTRUCTIONS



Model : HiBREW H7A

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

1. Read all instructions.
2. Before using, check that the voltage of wall outlet corresponds to rated voltage marked on the rating plate.
3. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
4. To protect against fire, electric shock and injury to person, do not immerse main parts of the propipe, cord, plug, in water or other liquid.
5. The appliance must not be immersed.
6. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
9. Place appliance on flat surface or table, do not hang power cord over the edge of table or counter.
10. Ensure the power cord do not touch hot surface of appliance.
11. Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
12. To disconnect, remove plug from wall outlet, always hold the plug, but never pull the cord.
13. Do not use appliance for other than intended use and place it in a dry environment.
14. Be careful not to get burned by the steam.
15. Do not touch the hot surface of appliance (such as steam wand, and the steel mesh just boiling). Use handle or knobs.
16. Do not let the coffee maker operate without water.
17. DO NOT remove the metal funnel while brewing coffee. Please remove the metal funnel to make additional coffee after finish brewing for more than 10 seconds. Caution should also be taken while removing the metal funnel since the metal parts will be hot. Please make sure to hold it by the handle and to use the filter retention clip to dispose the grounds. Caution should be taken when moving unit with hot liquids.
18. Connect plug to wall outlet before using and turn any switch off before plug is removed from wall outlet.
19. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
20. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
21. Children shall not play with the appliance.
22. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
23. The bean box does not have the function of sealing, please clean the bean box in time, and pour the coffee beans back into other tightly packed containers, so as not to affect the coffee taste and the normal use of the bean grinder due to the moisture return of the coffee beans.
24. Save these instructions.


Warning: pressure

In order to prevent the hot steam and hot water from scalding the body or causing other personal injury, and to prevent damage to the product, before you use this coffee Do not remove the tank or funnel assembly while making coffee or milk foam. Before you remove the funnel assembly to make another cup of coffee, please ensure that the coffee machine is in standby state. If you want to add more water to the tank, please press the power switch  button to ensure that the power of the product is off. When extracting coffee, ensure that the high pressure funnel has been rotated to the specified position to avoid the release due to pressure during use, which may cause human injury.

High temperature


When the machine is working, do not put your hands and other parts of your body into the bottom of the funnel or steam pipe to prevent scalding; It is forbidden to touch the steam pipe with hands or other parts of the body at any time. When rotating the steam pipe, you can only contact the silicone sleeve on the steam pipe to prevent scalding.

KNOW YOUR PRODUCT

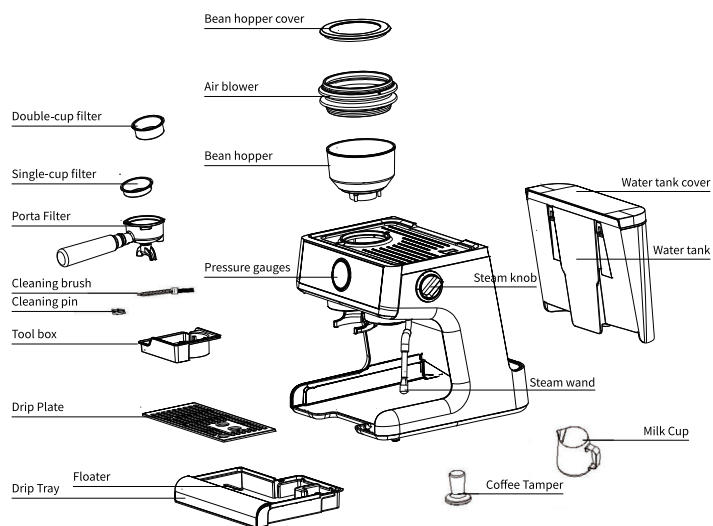


Model	CM5020DI-GS
Water tank capacity	2.8 L
Voltage	AC 220-240V 50-60Hz
Power	2520-3000W

Control panel

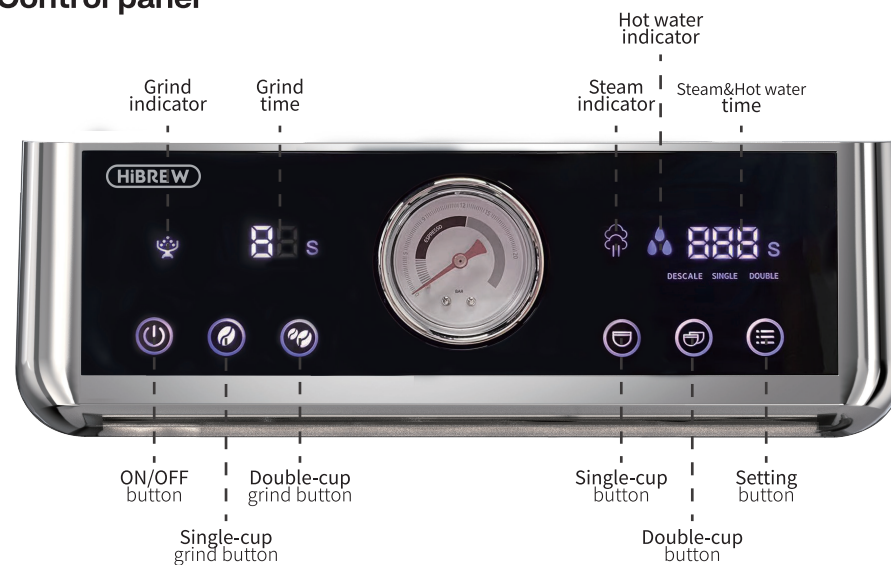

Tool box and cleaning accessories


This product is equipped with auxiliary tools, cleaning needle and cleaning brush are placed in a separate tool box, single or double cup filter screen can also be placed in the tool box, easy storage. The tool box is placed at the lower left of the machine, which can be seen by removing the water tray. (Figure 6)

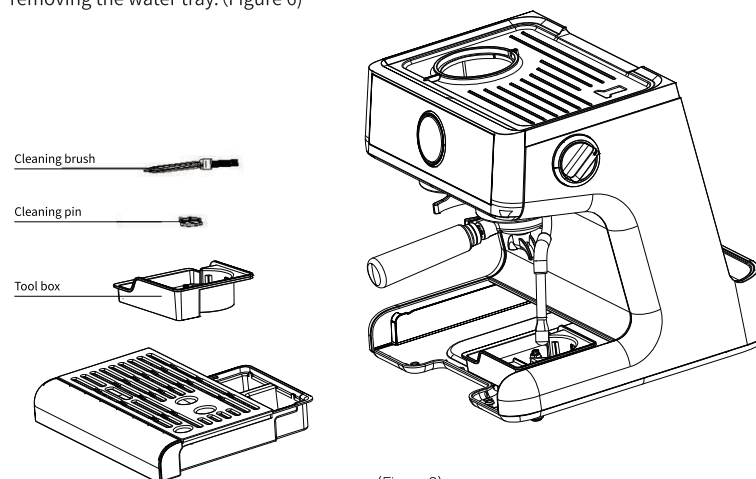

(Figure 6)

Cleaning Pin


If the cleaning needle is used to clean the single and double cup filter screen and steam nozzle, the thick one is used to clean the steam nozzle and the thin one is used to clean the filter screen (Figure 7).

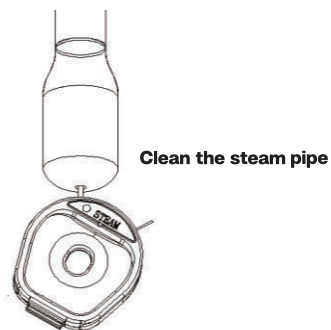


(Figure 7)

Cleaning brush

The cleaning brush is mainly used to clean the bean grinding system; Referring to the cleaning description of the bean grinder, after removing the bean grinding wheel, you can use the cleaning brush to clean the powder chamber and powder channel.

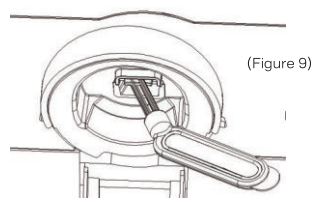


Clean the anti-static device and coffee powder outlet (if coffee powder coming out slower than usual or coffee powder floats, clean the anti-static device and the coffee powder outlet with attached cleaning brush as Figure 9)

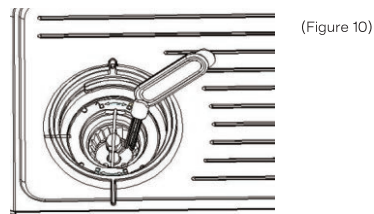


Clean the grinder chamber and the powder channel with attached cleaning brush as Figure 10.

The rear end of cleaning brush could be used to detach filter from funnel as Figure 11

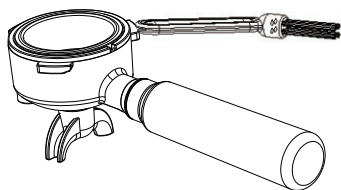

(Figure 11)

Powder hammer

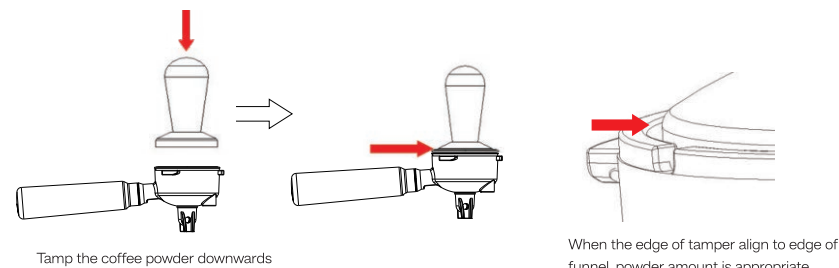

BEFORE THE FIRST USE

1. Check and ensure that all accessories are complete and free from damage.
2. Fill the water tank with water, and the water level shall not exceed the max position.
3. Take the high-pressure funnel (no coffee powder at this time) and align it with the buckle of the funnel support, and rotate it counterclockwise to lock the funnel (put a single cup or double cup filter screen as required)
4. Connect the power supply and press the power button to enter the preheating state until the whole machine is preheated and enters the standby state.
5. Turn the knob to the  position to release an appropriate amount of steam (please note that the steam pipe should be aligned with the water tray or use a cup to receive water to avoid scalding)
6. Press the button of single cup of coffee or double cup of coffee to clean the pipeline of the machine (please be careful not to put any part of your body under the funnel, please use the cup to receive water to avoid scalding).
7. After the water in the pan stops flowing out.
8. Thoroughly clean the detachable parts of the whole machine with warm water.

 Choose the right coffee powder _____

coffee powder

Coffee should be freshly ground and deeply roasted. You may need to use French or Italian roasted coffee powder for espresso. Pre ground coffee powder can only remain fragrant for 7 to 8 days unless stored in a sealed container and in a cool place. Do not store coffee in the refrigerator or freezer. Generally, it is not recommended to use pre ground coffee powder. It is easier for coffee beans to retain coffee aroma and obtain higher coffee quality.

Grind

If you are making coffee, this step is a key step in the espresso making process and requires more practice.

- The right grinding powder should look like salt.
- If ground too finely, it may cause the coffee to flow out intermittently or make coffee.
- If the grinding is too coarse and the water flows too fast through the coffee, it will affect the strong aroma and taste of the coffee.
- You can adjust the thickness of ground coffee powder by adjusting the coffee bean box, which will vary according to the category and quality of coffee beans you use. Therefore, you still need to make appropriate adjustments to achieve the best effect.
- Fresh roasted coffee beans (within 1 month). The grinding gear is set between 5-10. The powder output of double cup grinder is about 19g and that of single cup is about 13g, which has a relatively good coffee extraction effect (affected by the baking degree and freshness of coffee beans, the parameters may need to be adjusted)
- In order to prevent the coffee beans from being affected by moisture and affect the grinding and final coffee taste and effect, please do not put too many coffee beans in the bean box.

In order to obtain uniform and consistent coffee powder, please properly adjust the powder thickness of the grinder according to the category and quality of coffee beans, so as to obtain a cup of high-quality coffee.

Operational Instruction

1. The water level in the drinking water tank shall not exceed the "Max" position.
2. Plug in the power supply, the power key  indicator lights up 50% in advance, press the power key  (please ensure that the steam knob is in the 12 o'clock position), and the machine enters the preheating state. The specific operation is as follows:

There is a function display area on the left and right sides of the pressure gauge. The following is the lighting condition of the indicator light under various states of the machine. At the same time, please note that the coffee function and hot water function (or steam function) of this machine can be used at the same time;

Preheating: press the power button  once, the whole machine enters the preheating state, and the  indicator light flashes in the form of breathing light; At the same time, the button of single cup and double cup grinding beans lights up;

Standby mode: when the whole machine is preheated and enters the standby mode, all indicators except the descaling indicator are always on. At this time, all functions of the coffee machine can be used normally.


Make a single cup of coffee: in the standby mode, install the single cup filter screen into the funnel, load about 13g of coffee powder, use the powder hammer and press the coffee powder with a force of about 12.5kg, then align the funnel assembly with the clamping position of the funnel support, screw in the funnel support counterclockwise, put the coffee cup on the coaster, press the single cup of coffee key to enter the single cup of coffee making function. When the set flow (about 30ml) is reached, the system automatically stops working and the single cup of coffee function ends, The whole machine enters the standby state.

Making double cups of coffee: in standby mode, install the double cup filter screen into the funnel, load about 19g of coffee powder, use the powder hammer and press the coffee powder with a force of about 12.5kg, then align the funnel assembly with the clamping position of the funnel support, screw in the funnel support counterclockwise, put the coffee cup on the coaster, press the double cup of coffee key to enter the double cup of coffee making function. When the set flow (about 60ml) is reached, the system automatically stops working and the double cup of coffee function ends, All the lights on the panel are always on, and the whole machine enters the standby state.

Special reservation:

1. The single cup and a cup of coffee, the user can according to the habits and the need to adjust the specific flow of coffee, specific operation is as follows: push the single or double coffee cup long, or indicator lights flashing at the same time, and start the coffee, when the amount of flow to achieve the user wants to loosen the single or double file button, buzzer sounded, the system will record user traffic. When the user uses it again, the single and double cup flow will run according to the user's last set flow; (Only the flow rate in 20ml-125ml single cup (250ml double cup) is regarded as valid record)
2. Long press program setting key + single cup coffee key or program Setting key + double cup coffee key to restore single or double cup coffee flow to factory setting;

When brewing the coffee, make sure the funnel is rotated in the correct position as shown below

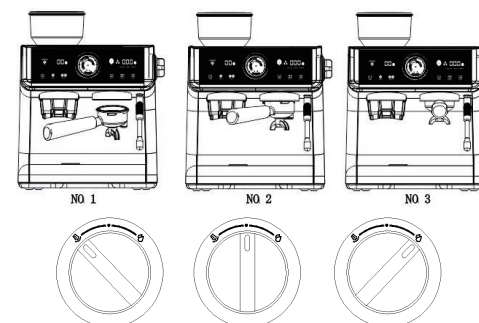

Steam function: in standby state, the knob is turned to "  " to enter the steam function. At this time, the steam/hot water indicator blinks and the steam function runs. Turn the knob to the center position "  " the steam function stops, the machine enters the standby state

Hot water function: in standby state, the knob is turned to "  ", and the steam/hot water indicator blinks, and the hot water function runs. Turn the knob to the middle position "  ", the hot water function stops, and the machine enters the standby state.

Attention:

1. Steam function will produce high temperature steam, please pay attention to avoid scalding when using.
2. In order to ensure the foaming effect of milk, please rotate the knob to 12 o'clock after the steam function runs for 3-5 seconds, then extend the steam tube into the milk, and then rotate the knob to the steam position for milk foaming.
3. After using this function, please turn the knob to 12 o'clock in time. If it does not turn back, the indicator will alarm and blink

Sleep state: the machine will automatically enter the sleep state when there is no operation for 15 minutes in the standby state. In the sleep state, press any key and turn the knob to activate the machine to re-enter the preheating state.

Suggestion: we suggest that you preheat the appliance before brewing the coffee, including funnel, filter screen and cup, so that the coffee will not be affected by the cold appliance. The specific method is to put the filter screen into the funnel, screw the funnel into the funnel support, put in the cup, press ☹ or ☺, and then brew the coffee after the machine stops.

Special attention: the steam and coffee functions of this machine can be used at the same time. Please pay attention to the function selection when operating the machine to avoid personal injury due to wrong operation.

2. Ground Coffee Beans

This product has a coffee bean grinding function, before using this function, please make sure that all devices are installed in accordance with the requirements. The details are as follows:

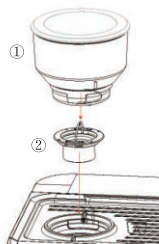


Figure 1: install cutter head 2 and tighten it clockwise; then install bean box 1 and screw it as shown in Figure 2

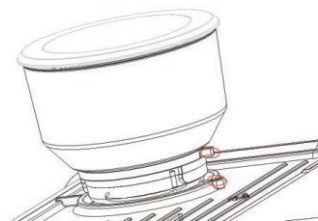


Figure 2: align the positions in red circles in the figure, and press it down, rotate it clockwise and install it into the machine.

There're markings to show the coffee coarseness on bean box, see Figure 3. To make the coffee coarseness you prefer, make sure the coffee coarseness setting you want on bean box is aligned with the mark position on the top cover (as shown in Figure 4).






Figure 3: from 0 to 30, coffee power is from fine to coarse. Bigger number for coarser coffee powder.

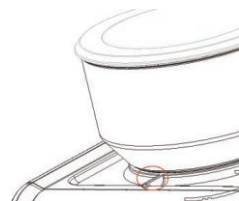

(Figure 4)

1. After ensuring that the device is installed in place and the bean box indication on the panel changes from red to off, it indicates that the bean grinder is ready and can be used normally.
2. Add an appropriate amount of coffee beans into the bean box. In order to avoid moisture affecting the grinding and final coffee taste and effect, please do not put too many coffee beans into the bean box.
3. Put the funnel into the left powder receiving support as shown in Figure 5

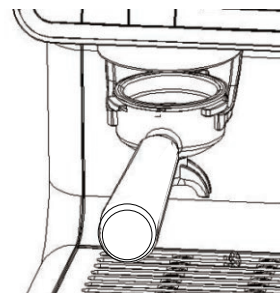

(Figure 5)

4. Press the single cup grinding button, the grinder will start and stop automatically after reaching the set grinding amount. You can also operate the single cup grinding button to stop halfway.
5. Press the double cup grinder button, the grinder starts, automatically stops after reaching the set amount of grinding powder, you can also operate the double cup grinder button to stop halfway.
6. Take out the funnel, knock the funnel on the table, and pre-powder the coffee in the strainer.
7. Press the coffee powder with a force of about 12.5kg.
8. Screw the funnel counterclockwise into the funnel support, and select the corresponding single or double button according to the filter cup used:

Program:

1. When the bean box is not installed, the single cup grinding bean key and the double cup grinding bean key are always bright red at the same time.
2. When the grinding function cannot be used normally, the single cup grinding key and double cup grinding key flash, accompanied by three beeps.
3. In order to protect the bean grinding system, when the bean grinding function lasts for 3 minutes and the intermediate stop time is less than 6 minutes, the system will restrict the normal use of the bean grinding function. After the interval reaches 6 minutes, the system will automatically release this restriction and the bean grinding system will return to normal.

Adjustment of grinding time: the user can independently set the grinding time of pressing the single cup (or double cup) grinding button for a single time. The specific operation method is to press and hold the single cup (or double cup) grinding button. At this time, the corresponding indicator flashes, and the grinder will run. When it runs to the time required by the user, release the single cup (or double cup) grinding button, the buzzer rings, and the system will record this time. The next time you press the single cup (or double cup) grinding button, the system will execute the newly set time (the system only records the time exceeding 5 seconds, and does not record the time less than 5 seconds). At the same time, press and hold the program setting key + single cup (or double cup) bean grinding key to restore the factory setting of bean grinding time.

3. Clean Bean grinder cleaning

During the use of the grinder, the powder outlet channel will be blocked due to the influence of coffee beans and external factors. Please clean the powder outlet channel in time in case of the following circumstances

1. Clean the powder outlet channel and grinding wheel at least once every two weeks.
2. When the powder output decreases, please clean the powder output channel and grinding wheel.
3. When using the grinder to finish grinding fine coffee powder, please clean out the powder channel in time.
4. The machine has anti-static powder system, when the coffee powder floating out of the funnel, please use a brush to clean the powder crossing position in time.

Cleaning method of bean grinder:

Note: When cleaning the grinder, please make sure there are no beans in the bean box, and press the grinder button, the grinder can work normally, no coffee powder out of the outlet.

1. Turn the bean box counterclockwise and remove the bean box.
2. Rotate the internal grinding wheel counterclockwise, clean the grinding wheel with the attached cleaning brush, and remove the coffee powder in the teeth; Please note that the mill wheel should not be washed directly with water.
3. Use the supplied cleaning brush to clean the grinder cavity and outlet channel.
4. Do not install the grinding wheel at this time, reinstall the empty bean box, press the grinding button, and let the grinder run to sweep out the remaining powder in the grinding bean cavity. (If not, repeat steps 3 and 4).
5. Remove the bean box counterclockwise, install the grinding bean wheel, and finish cleaning.

4. Descaling reminder

This product is equipped with descaling reminder function and descaling program, which needs the cooperation of users in the descaling process. The whole process of running the program is expected to take about 10 minutes.

Note: when the descaling program is started, please ensure that:

1. Ensure that there is at least 1 liter of water in the water tank.
2. Empty the water tray and install it in place.
3. Power up the appliance and put it in standby mode.
4. Place 2 cups of filter screen into the funnel.
5. Screw the funnel into the funnel support.
6. The cleaning function can be exited at any time by pressing the power button.
7. When the cleaning program starts, the  indicator light and descaling indicator light will flash and prompt, and will flash throughout the operation.
8. If the descaling step is not started within 1 minute, the appliance will exit the descaling cycle and return to the standby state.

Descaling instructions

It is recommended to descale every 4-6 months;

Descaling can be selected: ① Coffee machine descaling tablet ② Liquid detergent ③ White vinegar and warm water

Descaling cycle


The descaling cycle takes about 10 minutes.

Note: After the descaling reminder starts or before the user starts the descaling program, please complete the following descaling preparations before running the descaling program!

Descaling preparation


Add the solution to the water tank (choose one of three methods)

- ① Fill 1 liter of water into the water tank. Add descaling tablets and wait until the descaling tablets are dissolved;
- ② Add half a cup of liquid descaling agent into the water tank, and then inject 1 liter of warm water to allow the solution to mix thoroughly;
- ③ Add 1.5 tablespoons of white vinegar to the water tank, and then inject 1 liter of warm water to allow the solution to mix thoroughly. Insert water tank into position.

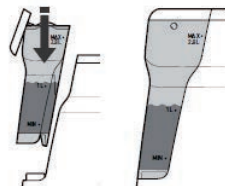

Place container

Place a 1 liter container under the brewing head and another 1 liter container under the steam tube.

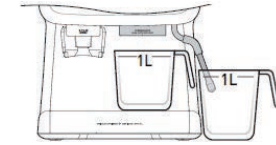

After completing the above steps, you can start the cleaning procedure as follows:

1. When the system detects that the flow of the whole machine reaches 15L, the descaling function will start and automatically enter the descaling program;
2. In standby mode, long press the single cup coffee key + double cup coffee key + program setting key to start the descaling program

When the dirt removal indicator light and the  power indicator light are on and flash, please perform the following operations:

Step 1: Start the descaling cycle

- Turn the knob to  position
 -  The steam / hot water indicator is always on, and the descaling indicator and  power light flash
- When the water pump starts, the hot water will be released from the brewing head and steam pipe. After 2 minutes, the water pump will make different sounds.
- When the hot water has stopped releasing from the brewing head and steam pipe, this step is completed and turn the knob to the  position.

Step 2: prepare for cleaning

Important: allow a maximum of 5 minutes to complete the following steps before the descaling cycle exits. The steam conduit and the brewing head need to be cleaned with fresh water to remove the descaling solution

- Flushing water tank
- Fill the water tank with water
- Empty container

Step 3: start cleaning

Turn the knob to the  position;

The steam / hot water indicator is always on, and the descaling indicator and power light  flash;

When the water pump starts, the hot water will be released from the brewing head and steam pipe. After 2 minutes, the water pump will make different noises;

When the hot water has stopped releasing from the brewing head and steam pipe, the descaling is completed and the knob is turned to the  position

Descaling cycle completed

Turn the knob to the  position and ,  light up at the same time.

To indicate that the descaling cycle is complete, the appliance will beep and the indicator light  stops flashing.

The appliance will return to standby mode.

5. Custom extraction temperature

The machine has PID control function, which can monitor the heating block to heat hot water to extract coffee at a temperature of about 92°C.

You can adjust the extraction temperature of coffee. The adjustable temperature range is between 90-96°C, and each gear is increased by 2 °C, which can meet different taste requirements.

- When the temperature is high, the bitterness will increase and the acidity will decrease.
- When the temperature is low, the bitterness will decrease and the acidity will increase.

Enter the extraction temperature customization mode

Long press the  program key button for about 4 seconds, the machine will sound a beep, and the program setting indicator starts to flash.

Temperature definition:

The button of single cup grinding beans corresponds to 90°C;

The button of double cup grinding beans corresponds to 92°C;

The button of single cup coffee corresponds to 94°C;

The button of double cup coffee corresponds to 96°C.

First of all, the temperature corresponding to the original setting is steady on. You can change the extraction temperature by pressing other keys, and the corresponding indicator is steady on. Finally, press the program setting button to confirm the setting and return to the standby state.

Note: the program setting indicator will always be on, indicating that it is in customization mode.

Important: 1. After entering the customization mode, if no button is pressed within 1 minute, the machine will exit the mode and return to the standby state;
2. Press any button during the process to exit the setting.

6. Restore factory settings

In case of disordered settings, the user can press and hold the power button + program setting key button at the same time. The appliance will beep and all indicators will flash for 3 times. At this time, the system will return to the factory setting.

Cleaning and maintenance

Warning: please unplug before cleaning and let the coffee machine cool sufficiently to prevent scalding. Do not immerse the coffee machine or power cord plug in water or other liquids to avoid danger.

1. After each use, put all removable parts into water for cleaning. If necessary, add cleaning solution and rinse with clean water.

2. Often use moisture-proof sponge to scrub the outer surface of the coffee machine to remove dirt.

Note: do not use alcohol or detergent, and do not immerse the machine in water for cleaning.

3. Turn clockwise to remove the metal funnel and remove the coffee grounds inside. Then you can clean the funnel and metal filter accessories with detergent, but finally you must rinse them with clean water.

4. After cleaning all removable parts, wipe all parts to dry.

Note: the detachable water tank cannot be put into the dishwasher for cleaning.

Troubleshooting

malfunction	cause	solution
No display	Check whether the plug is inserted in place and whether the power switch is pressed.	Plug in the power plug and make sure the power key is pressed.
There are marks of water at the bottom of the machine	Water tank or tap pan not installed properly \ Tap pan is full.	Ensure that the water tank and water box are installed properly. If they are installed properly, and the water tray has been emptied. If still unable to solve, do not privately disassemble the machine, the machine to the local after-sales maintenance processing.
After starting the machine, you can hear a ticking sound and a hissing sound after making coffee	This is a normal phenomenon and is the sound generated by the normal operation of the pressure control valve.	
The funnel does not produce coffee or flows drop by drop, or the funnel cannot be screwed in normally	The amount of coffee powder exceeds the standard, the coffee powder is too fine or the powder pressing pressure is too high.	The amount of powder should not exceed the standard, and the grinding gear of the bean grinder should be adjusted appropriately until it is appropriate. It is not advisable to press the powder repeatedly with excessive force.
Coffee is fat free	The coffee beans are damp or the coffee powder is too thick.	Choose fresh coffee beans and ground powder with moderate thickness to make coffee.
No steam	The steam function is not preheated completely; The steam nozzle is blocked.	The machine can only pump steam after the steam is preheated; The machine needs descaling and the steam nozzle needs to be cleaned with a cleaning needle.
After the steam comes out, you can't make coffee or hot water immediately, and the machine will pump water automatically	After the steam is pumped, it needs to be depressurized and cooled. At this time, no other operation can be carried out. The purpose of pumping water is to quickly cool the heating pot.	It takes 20-30s for pressure relief and cooling. After pressure relief and cooling, coffee or hot water can be boiled only after the indicator on the panel is displayed normally.

Troubleshooting

malfunction	cause	solution
The grinder does not work AND/OR the grinder indicator (dot at the left side of the display) is illuminated red AND/OR a beep sounds when pressing the GRIND button and the system indicator flashes.	The grinder is not assembled correctly.	Ensure that the grinder burrs are installed and the bean hopper is mounted correctly and filled with fresh coffee bean.
	The grinder is blocked.	Disassemble and clean the grinder. Remove any obstacles. (There is a video reference for cleaning the grinder, please contact customer service.)
	The shutter of the bean hopper and/or the safety lock of the grinder are damaged.	Only with the shutter protrusion and the bean hopper in correct orientation, you can install the bean hopper with when pressing the GRIND lock of the grinder are ease. Do not use violence, when installing or removing the bean hopper! If you find the safety lock accessories are missing, please contact the merchant in time.
	The grinder Burrs wear out	Please contact the merchant to provide the replacement video for replacement.
The grinder does not produce flour smoothly/slowly		
The grinder stop unexpectedly and cannot be started again.	You ground lager amounts without breaks. The over-heat protection of the grinder is active.	Wait approx. 10 minutes. Then try again, after 3 minutes of continuous operation, make a break of approx. 6 minutes.

Troubleshooting

malfunction	cause	solution
The espresso function does not work AND/OR the espresso function stops unexpectedly AND/OR froth comes out of the spouts of the portafilter.	This may happen just after switching on the appliance or after using the steam function.	The water system needs to reach the extraction temperature, before an extraction can be started. Wait until the espresso icons illuminate, before attempting to start an extraction.
	During extraction, you switched to the steam or hot water function.	The extraction will be terminated at once, when another function is activated.
	The water tank is empty.	Fill a sufficient amount of water into the water tank. Always ensure that the filling level in the water tank is between the "MIN" and "MAX" making, before starting any function of the machine.
	The grind size is too fine.	Only use coffee powder that is suited for espresso machines. It is recommended to select the 12-15 grade when grinding the espresso powder
	The coffee powder is tamped too firmly.	Do not apply too much force, when tamping the coffee powder (12-13 kg)
	The water system strongly requires descaling.	Always descale the water system in time . If the water hardness of your tap water is extremely high, use non-carbonated, low-mineral table water.
	The pores of the filter basket are clogged.	Thoroughly clean the filter basket. If required, use the needle tool for opening the pores of the filter basket.

Troubleshooting

malfunction	cause	solution
During extraction, the coffee runs out at the exterior of the portafilter	The portafilter is not installed correctly.	The handle of the portafilter must be at right angle to the front of the machine
	Coffee powder is spilled at the rim of the filter basket.	Carefully remove any surplus coffee powder from the rim of the filter basket, before installing the portafilter at the ground head.
	Too much coffee powder in the filter basket.	Use the correct amount of coffee powder for the selected filter basket. If required,select another filter basket.
	Coffee powder stick to the sealing ring of the group head or the sealing ring is worn out, damaged or missing.	Clean the group head. For cleaning the group head, only use a soft cloth or SOFT nylon brush. If the problem persists, get in contact with an authorized service centre for examination and repair. Do not poke in the group head with any hard or sharp-edged objects.
	The coffee powder is tamped too firmly.	Do not apply too much force for tamping (12-13 kg)

If you do not find the cause of the problem, please do not disassemble the machine, you should contact your local maintenance agency



Environmental protection
You can help protect the environment!
Strictly abide by the regulations: Please put the discarded electrical equipment into the corresponding waste station for disposal

WARRANTY

WARRANTY INFORMATION TWO YEARS LIMITED WARRANTY

MANUFACTURER warrants that for a period of two years from the date of purchase, this product will be free from defects in material and workmanship. MANUFACTURER , at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or repaired product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will invalidate this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable.

Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. MANUFACTURER'S dealers, service centers, or retail stores selling MANUFACTURER products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, dis-assembly, repair or alteration by anyone other than MANUFACTURER or an authorized MANUFACTURER service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on MANUFACTURER'S Liability?

MANUFACTURER shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. MANUFACTURER disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise. MANUFACTURER shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or Loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above Limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

To ensure your product warranty, please register your product at www.hibrew.com/warranty.



إجراءات حماية مهمة

قبل استخدام الجهاز الكهربائي، يجب دائمًا اتباع الاحتياطات الأساسية التالية:

1. اقرأ جميع التعليمات.
2. قبل الاستخدام، تحقق من أن جهد مأخذ التيار بالحائط يتوافق مع الفولتية المقدرة الموضحة على لوحة التصنيف.
3. تم دمج هذا الجهاز مع قابس مؤرض. يرجى التأكد من أن مقبس الحائط في منزلك مؤرض جيدًا.
4. للحماية من الحريق والصدمات الكهربائية وإصابة الشخص، لا تغمر الأجزاء الرئيسية من أنبوب البروبيل أو السلك أو القابس أو في الماء أو أي سائل آخر.
5. يجب عدم غمر الجهاز.
6. قم بإزالة القابس من مقبس الحائط قبل التنظيف وعند عدم الاستخدام. اترك الجهاز يبرد تمامًا قبل التشغيل أو توصيل المكونات أو قبل التنظيف.
7. لا تقم بتشغيل أي جهاز به سلك أو قابس تالف أو بعد تعطل الجهاز، أو تعرضه للسقوط أو التلف بأي شكل من الأشكال. أعد الجهاز إلى أقرب مركز خدمة معتمد لفحصه أو إصلاحه أو تعديله كهربائيًا أو ميكانيكيًا.
8. قد يؤدي استخدام الملحقات غير الموصى بها من قبل الشركة المصنعة للجهاز إلى نشوب حريق أو صدمة كهربائية أو إصابة الأشخاص.
9. ضع الجهاز على سطح مستو أو طاولة، ولا تعلق سلك الطاقة على حافة الطاولة أو العداد.
10. تأكد من أن سلك الطاقة لا يلمس السطح الساخن للجهاز.
11. لا تضع صانعة القهوة على سطح ساخن أو بجانب النار لتفادي تعرضها للتلف.
12. للفصل، انزع القابس من مقبس الحائط، وامسك القابس دائمًا، لكن لا تسحب السلك أبدًا.
13. لا تستخدم الجهاز لغرض المقصود ووضعه في بيئة جافة.
14. احرص على ألا تحترق بالبخار.
15. لا تلمس السطح الساخن للجهاز (مثل عصا البخار والشبكة الفولاذية أثناء الغليان فقط). استخدم المقابض أو المقابض.
16. لا تدع صانعة القهوة يعمل بدون ماء.
17. لا تقم بإزالة القمع المعدني أثناء تحضير القهوة. يرجى إزالة القمع المعدني لعمل قهوة إضافية بعد الانتهاء من التخمير لأكثر من 10 ثوانٍ. يجب أيضًا توخي الحذر أثناء إزالة القمع المعدني لأن الأجزاء المعدنية ستكون ساخنة. يرجى التأكد من إمساكه بالمقبض واستخدام مشبك تثبيت المرشح للتخلص من الأسس. يجب توخي الحذر عند تحريك الجهاز بالسوائل الساخنة.
18. قم بتوصيل القابس بمأخذ الحائط قبل الاستخدام وأوقف تشغيل أي مفتاح قبل إزالة القابس من مقبس الحائط.
19. يمكن استخدام هذا الجهاز من قبل الأطفال الذين تتراوح أعمارهم بين 8 سنوات وما فوق إذا تم إعطاؤهم الإشراف أو التعليمات فيما يتعلق باستخدام الجهاز بطريقة آمنة وإذا فهموا المخاطر التي تنطوي عليها. لا يجوز للأطفال إجراء التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وتحت إشرافهم. احتفظ بالجهاز وسلكه بعيدًا عن متناول الأطفال الذين تقل أعمارهم عن 8 سنوات.
20. يمكن استخدام الأجهزة من قبل الأشخاص ذوي القدرات الجسدية أو الحسية أو العقلية المنخفضة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم منحهم الإشراف أو التعليمات المتعلقة باستخدام الجهاز بطريقة آمنة وفهم المخاطر التي تنطوي عليها.
21. لا يجوز للأطفال اللعب بالجهاز.
22. هذا الجهاز مخصص للاستخدام في المنزل والتطبيقات المماثلة مثل:
 - مناطق مطبخ الموظفين في المتاجر والمكاتب وبيئات العمل الأخرى؛
 - الاستراحات والشاليهات ومنازل المزرعة
 - من قبل العملاء في الفنادق والموتيلات وغيرها من البيئات السكنية؛
 - بيئات نوع المبيت والإفطار.
23. لا تحتوي حاوية الحبوب على وظيفة الحفظ لفترات طويلة والتعبئة بإحكام، يرجى تنظيف صندوق الحبوب في الوقت المناسب، ثم صب حبوب البن مرة أخرى في عبوات أخرى معبأة بإحكام، حتى لا تؤثر على طعم القهوة والاستخدام العادي لمطحنة الحبوب بسبب إلى عودة الرطوبة من حبوب البن.
24. احتفظ بهذه التعليمات.


موديل: HiBREW H7A

اقرأ هذا الكتيب جيدًا قبل استخدامه واحفظه للرجوع إليه في المستقبل

لوحة التحكم

عندما تعمل الآلة ، لا تضع يديك وأجزاء أخرى من جسمك في قاع القمع أو أنبوب البخار لمنع الحروق ؛ يحظر لمس أنبوب البخار باليد أو أجزاء أخرى من الجسم في أي وقت. عند تدوير أنبوب البخار ، يمكنك فقط الاتصال بغلاف السيليكون الموجود على أنبوب البخار لمنع الحروق.

تم تجهيز هذا المنتج بأدوات مساعدة ، ويتم وضع إبرة التنظيف وفرشاة التنظيف في صندوق أدوات منفصل ، ويمكن أيضا وضع سلة مرشح كوب مفردة أو مزدوجة في صندوق الأدوات ، وسهولة التخزين. يتم وضع صندوق الأدوات في الجزء السفلي الأسير من الجهاز ، والذي يمكن رؤيته عن طريق إزالة صينية المياه. (الشكل 6)

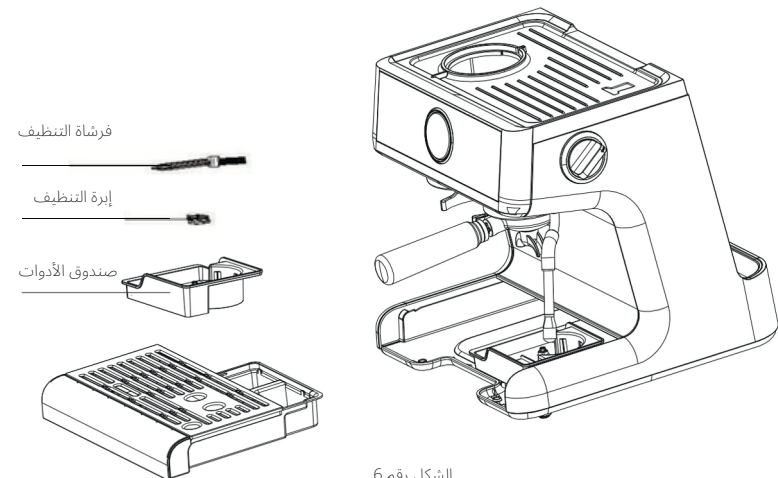

الشكل رقم 6

21 /

إبرة التنظيف

إذا تم استخدام إبرة التنظيف لتنظيف شاشة مرشح الكوب الفردي والمزدوج وقهوة البخار ، يتم استخدام الإبرة السميكة لتنظيف قهوة البخار ويتم استخدام الإبرة الرفيعة لتنظيف سلة المرشح (الشكل 7).




تنظيف عصا التبخير


(الشكل 7)

فرشاة التنظيف

تستخدم فرشاة التنظيف بشكل أساسي لتنظيف نظام طحن حبوب القهوة؛ بالإشارة إلى وصف تنظيف مطحنة حبوب القهوة، بعد إزالة عجلة طحن الحبوب ، يمكنك استخدام فرشاة التنظيف لتنظيف حجرة المسحوق وقناة المسحوق.

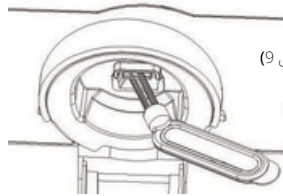

(الشكل 9)

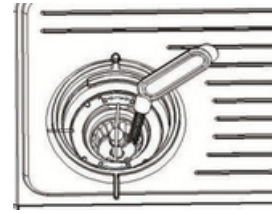


(الشكل 10)

قم بتنظيف الجهاز المضاد للكهرباء الساكنة ومنفذ طاقة القهوة (إذا خرج مسحوق القهوة بشكل أبطأ من المعتاد أو طفو مسحوق القهوة ، فقم بتنظيف الجهاز المضاد للكهرباء الساكنة ومخرج مسحوق القهوة بفرشاة التنظيف المرفقة كما في الشكل 9)


نظف حجرة المطحنة وقناة المسحوق بفرشاة التنظيف المرفقة كما في الشكل 10

يمكن استخدام الطرف الخلفي لفرشاة التنظيف لفصل المرشح عن القمع كما في الشكل 11

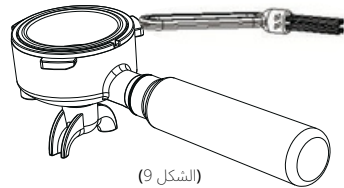

(الشكل 9)

مكبس مسحوق القهوة

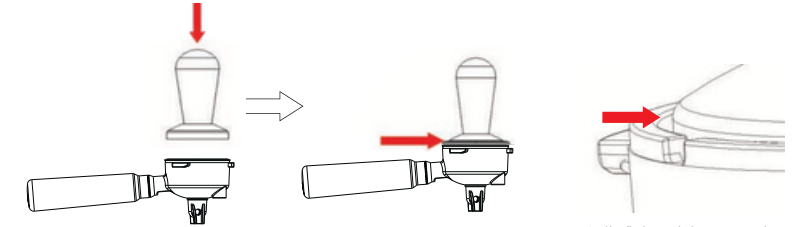

قم بدك مسحوق القهوة للأسفل

عندما تتم محاذاة حافة المكبس مع حافة القمع، تكون كمية مسحوق القهوة مناسبة

قبل الاستخدام الأول

1. تحقق وتأكد من أن جميع الملحقات كاملة وخالية من التلف.
2. املاً خزان المياه بالماء ، ويجب ألا يتجاوز مستوى الماء الحد الأقصى للوضع.
3. خذ قمع الضغط العالي (لا يوجد مسحوق قهوة في هذا الوقت) وقم بمحاذاته مع مشبك دعامة القمع ، وقم بتدويره عكس اتجاه عقارب الساعة لقفل القمع (ضع سلة مرشح كوب واحد أو سلة مرشح كوب مزدوج حسب الحاجة)
4. قم بتوصيل مصدر الطاقة واضغط على زر الطاقة للدخول في حالة التسخين المسبق حتى يتم تسخين الجهاز بالكامل ويدخل في حالة الاستعداد.
5. أدر المقبض إلى الموضع لتحرير كمية مناسبة من البخار (يرجى ملاحظة أنه يجب محاذاة أنبوب البخار مع صينية المياه أو استخدام كوب لاستقبال الماء لتجنب الحروق)
6. اضغط على زر فنجان قهوة واحد أو فنجان قهوة مزدوج لتنظيف خط أنابيب الجهاز (يرجى الحرص على عدم وضع أي جزء من جسمك تحت القمع ، يرجى استخدام الكوب لتلقي الماء لتجنب السقوط).
7. بعد توقف الماء في المقلاة عن التدفق.
8. قم بتنظيف الأجزاء القابلة للفصل تماماً من الجهاز بالكامل بالماء الدافئ.



إختيار القهوة المناسبة

مسحوق القهوة

يجب أن تكون القهوة مطحونة طازجة ومحمصة بعمق. قد تحتاج إلى استخدام مسحوق القهوة المحمص الفرنسي أو الإيطالي للإسبريسو. يمكن أن يظل مسحوق البن المطحون معطرا لمدة 7 إلى 8 أيام فقط ما لم يتم تخزينه في حاوية مغلقة وفي مكان بارد. لا تقم بتخزين القهوة في الثلاجة أو الفريزر. بشكل عام ، لا ينصح باستخدام مسحوق القهوة المطحون مسبقا. من الأسهل على حبوب البن الاحتفاظ برائحة القهوة والحصول على جودة قهوة أعلى.

الطحن

إذا كنت تصنع القهوة ، فهذه الخطوة هي خطوة أساسية في عملية صنع الإسبريسو وتتطلب المزيد من الممارسة.

يجب أن يبدو مسحوق الطحن الصحيح مثل الملح.

إذا تم طحنها ناعما جدا ، فقد يتسبب ذلك في تدفق القهوة بشكل متقطع .

إذا كان الطحن خشنا جدا وكان الماء يتدفق بسرعة كبيرة عبر القهوة ، فسيؤثر ذلك على رائحة القهوة القوية وطعمها.

يمكنك ضبط سمك مسحوق البن المطحون عن طريق ضبط صندوق حبوب البن ، والذي سيختلف وفقا لفئة وجودة حبوب البن التي تستخدمها. لذلك ، لا تزال بحاجة إلى إجراء التعديلات المناسبة لتحقيق أفضل تأثير.

حبوب البن المحمصة الطازجة (في غضون 1 شهر). يتم ضبط معدات الطحن بين 5-10. يبلغ ناتج المسحوق لمطحنة الكوب المزدوج حوالي 19 جراما ويبلغ إنتاج الكوب الفردي حوالي 13 جراما ، مما له تأثير جيد نسبيا في استخراج القهوة (يتأثر بدرجة الخبز ونضارة حبوب البن ، وقد تحتاج المعلومات إلى تعديل)

من أجل منع حبوب البن من التأثير بالرطوبة والتأثير على الطحن وطعم القهوة النهائي وتأثيرها ، يرجى عدم وضع الكثير من حبوب البن في صندوق الحبوب.

من أجل الحصول على مسحوق قهوة موحد ومتسق ، يرجى ضبط سمك مسحوق المطحنة بشكل صحيح وفقا لفئة وجودة حبوب البن ، وذلك للحصول على فنان من القهوة عالية الجودة.

إرشادات الاستخدام

1. يجب ألا يتجاوز مستوى الماء في خزان مياه الشرب وضع "الحد الأقصى".
 2. قم بتوصيل مصدر الطاقة ، يضيء مؤشر مفتاح الطاقة (☺) بنسبة 50% مقدما ، واضغط على مفتاح التشغيل (☺) (يرجى التأكد من أن مقبض البخار في موضع الساعة 12) ، ويدخل الجهاز في حالة التسخين المسبق، العملية المحددة هي كما يلي:
- توجد منطقة عرض وظيفية على الجانبين الأيسر والأيمن من مقياس الضغط. فيما يلي حالة الإضاءة لضوء المؤشر في ظل حالات مختلفة من الماكينة. في الوقت نفسه ، يرجى ملاحظة أنه يمكن استخدام وظيفة القهوة ووظيفة الماء الساخن (أو وظيفة البخار) لهذا الجهاز في نفس الوقت ؛
- التسخين المسبق:** اضغط على زر الطاقة (☺) مرة واحدة ، ويدخل الجهاز بأكمله في حالة التسخين المسبق ، ويومض ضوء المؤشر (☺) على شكل ضوء التنفس ؛ في الوقت نفسه ، يضيء زر الكوب الفردي وحبوب الطحن المزدوجة ؛

وضع الاستعداد: عندما يتم تسخين الجهاز بالكامل ويدخل في وضع الاستعداد ، تكون جميع المؤشرات باستثناء مؤشر إزالة الترسبات قيد التشغيل دائما. في هذا الوقت ، يمكن استخدام جميع وظائف آلة القهوة بشكل طبيعي.

اصنع فنجانا واحدا من القهوة: في وضع الاستعداد ، قم بتثبيت شاشة مرشح الكوب الواحد في القمع ، و قم بتحميل حوالي 13 جراما من مسحوق القهوة ، واستخدم مطرقة المسحوق واضغط على مسحوق القهوة بقوة حوالي 12.5 كجم ، ثم قم بمحاذاة مجموعة القمع مع موضع التثبيت لدعم القمع ، المسمار في دعم القمع عكس اتجاه عقارب الساعة ، ضع فنجان القهوة على السفينة ، واضغط على مفتاح فنجان القهوة الفردي للدخول إلى وظيفة صنع فنجان القهوة المفرد. عندما يتم الوصول إلى التدفق المحدد (حوالي 30 مل) ، يتوقف النظام تلقائيا عن العمل وتنتهي وظيفة فنجان القهوة الفردي ، ويدخل الجهاز بأكمله في حالة الاستعداد.


صنع أكواب مزدوجة من القهوة: في وضع الاستعداد ، قم بتثبيت شاشة مرشح الكوب المزدوج في القمع ، و قم بتحميل حوالي 19 جراما من مسحوق القهوة ، واستخدم مطرقة المسحوق واضغط على مسحوق القهوة بقوة حوالي 12.5 كجم ، ثم قم بمحاذاة مجموعة القمع مع موضع التثبيت لدعم القمع ، المسمار في دعم القمع عكس اتجاه عقارب الساعة ، ضع فنجان القهوة على السفينة ، واضغط على مفتاح الكوب المزدوج من القهوة للدخول إلى وظيفة صنع القهوة ذات الكوب المزدوج. عند الوصول إلى التدفق المحدد (حوالي 60 مل) ، يتوقف النظام تلقائيا عن العمل وتنتهي وظيفة الكوب المزدوج من القهوة ، وجميع الأضواء الموجودة على اللوحة مضاءة دائما ، ويدخل الجهاز بأكمله في حالة الاستعداد.

ضبط خاص:

1. الكوب الواحد وفنجان القهوة ، يمكن للمستخدم وفقا للعادات والحاجة إلى ضبط التدفق المحدد للقهوة ، عملية محددة هي كما يلي: دفع فنجان القهوة الفردي أو المزدوج لفترة طويلة ، أو أضواء المؤشر الومضة في نفس الوقت ، وبدء القهوة ، عندما يكون مقدار التدفق لتحقيق المستخدم يريد تخفيف زر الملف الفردي أو المزدوج ، بدا الجرس ، سيقوم النظام بتسجيل حركة مرور المستخدم. عندما يستخدم المستخدم مرة أخرى ، سيتم تشغيل تدفق الكوب الفردي والمزدوج وفقا لآخر تدفق محدد للمستخدم ؛ (فقط معدل التدفق في كوب واحد 20 مل - 125 مل (كوب مزدوج 250 مل) يعتبر سجلا صالحا)

2. مفتاح إعداد برنامج الضغط الطويل + مفتاح أو مفتاح إعداد برنامج فنجان واحد + مفتاح قهوة مزدوج الكوب لاستعادة تدفق القهوة بفنجان واحد أو مزدوج إلى إعداد المصنع ؛

عند تخمير القهوة ، تأكد من تدوير القمع في الموضع الصحيح كما هو موضح أدناه.

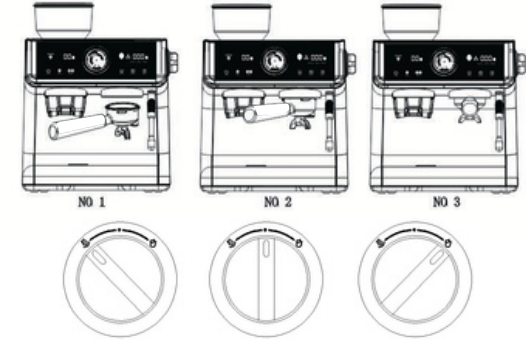

وظيفة البخار: في حالة الاستعداد ، يتم تشغيل المقبض إلى "☺" للدخول إلى وظيفة البخار. في هذا الوقت ، يومض مؤشر البخار / الماء الساخن وتعمل وظيفة البخار. أدر المقبض إلى الموضع المركزي "●" وتتوقف وظيفة البخار ، وتدخل الماكينة في حالة الاستعداد

وظيفة الماء الساخن: في حالة الاستعداد ، يتم تشغيل المقبض إلى "☺" ، ويومض مؤشر البخار / الماء الساخن ، وتعمل وظيفة الماء الساخن. أدر المقبض إلى الموضع الأوسط "●" ، وتتوقف وظيفة الماء الساخن ، ويدخل الجهاز في حالة الاستعداد.

تنبيه:

1. ستنتج وظيفة البخار بخارا بدرجة حرارة عالية ، يرجى الانتباه لتجنب اللسع والحرق عند الاستخدام.
2. من أجل ضمان تأثير رغوة الحليب ، يرجى تدوير المقبض إلى الساعة 12 بعد تشغيل وظيفة البخار لمدة 3-5 ثوان ، ثم تمديد أنبوب البخار إلى الحليب ، ثم تدوير المقبض إلى وضع البخار لرغوة الحليب.
3. بعد استخدام هذه الوظيفة ، يرجى تحويل المقبض إلى الساعة 12 في الوقت المناسب. إذا لم يتم الرجوع إلى الورا ، فسوف ينبه المؤشر ويومض


حالة السكون: سيدخل الجهاز تلقائياً في حالة السكون عند عدم وجود عملية لمدة 15 دقيقة في حالة الاستعداد. في حالة السكون ، اضغط على أي مفتاح وقم بتدوير المقفّل لتنشيط الجهاز لإعادة الدخول إلى حالة التسخين المسبق.

إقتراح: نقتراح عليك تسخين الجهاز مسبقاً قبل تخمير القهوة ، بما في ذلك القمع وشاشة القلتر والكوب ، حتى لا تتأثر القهوة بالجهاز البارد. الطريقة المحددة وضع شاشة المرشح في القمع ، وربط القمع في دعامة القمع ، ووضعه في الكوب ، والضغط (أو لا) ، ثم تحضير القهوة بعد توقف الماكينة.

تنبيه خاص: يمكن استخدام وظائف البخار والقهوة لهذا الجهاز في نفس الوقت. يرجى الانتباه إلى اختيار الوظيفة عند تشغيل الجهاز لتجنب الإصابة الشخصية بسبب التشغيل الخاطئ.

2. جوب البن المطحون


يحتوي هذا المنتج على وظيفة طحن جوب القهوة ، قبل استخدام الوظيفة ، يرجى التأكد من تثبيت جميع الأجهزة وفقاً للمتطلبات، وفيما يلي التفاصيل:

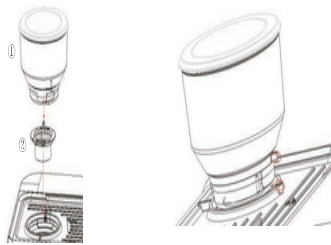

الشكل 1: تثبيت رأس الفاطم 2 وشده في أداة عقارب الساعة ، ثم قم بتثبيت صندوق جوب القهوة 1 والمسامر كما هو موضح في الشكل 2

الشكل 2: قم بمعداة الموضع في دوّار حدرار في الشكل ، واضغط عليه لأسفل ، وقم بتدويره في اتجاه عقارب الساعة وقم بتثبيتها في الجهاز


توجد علامات لإظهار خشونة القهوة على صندوق الجوب ، انظر الشكل 3. لجعل خشونة القهوة التي تفضلها ، تأكد من حالة إعداد خشونة القهوة الذي تريدة على صندوق الجوب مع موضع العلامة على الغطاء العلوي (كما هو موضح في الشكل 4)

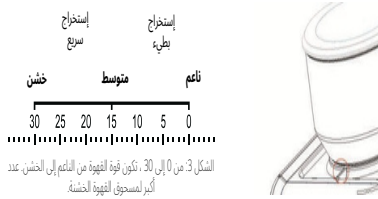

الشكل 3: من 0 إلى 30 ، تكون قوة القهوة من الخفيف إلى الحشن عدد أكبر لمسحوق القهوة الخشنة.

(الشكل 4)

- بعد التأكد من تثبيت الجهاز في مكانه وتغيير مؤشر صندوق الجوب على اللوحة من الأحمر إلى إيقاف التشغيل ، فإنه يشير إلى أن مطحنة الجوب جاهزة ويمكن استخدامها بشكل طبيعي.
- أضف كمية مناسبة من جوب البن إلى صندوق الجوب. من أجل تجنب الرطوبة التي تؤثر على الطحن وقمع القهوة النهائي وتأثيرها ، يرجى عدم وضع الكثير من جوب البن في صندوق الجوب.
- ضع القمع في المسحوق الأسير لتلقي الدعم كما هو موضح في الشكل 5

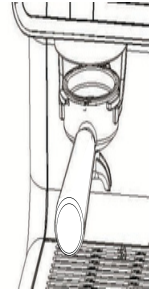

(الشكل 6)

- اضغط على زر طحن كوب واحد ، ستبدأ المطحنة وتتوقف تلقائياً بعد الوصول إلى كمية الطحن المحددة. يمكنك أيضاً تشغيل زر طحن الكوب الفردي للتوقف في المنتصف.
- اضغط على زر طاحونة الكوب المزدوج ، تبدأ المطحنة ، وتتوقف تلقائياً بعد الوصول إلى الكمية المحددة من مسحوق الطحن ، ويمكنك أيضاً تشغيل زر طاحونة الكوب المزدوج للتوقف في المنتصف.
- أخرج القمع ، واطرق القمع على الطاولة ، وقم بمسحوق القهوة مسبقاً في المصفاة.
- اضغط على مسحوق القهوة بقوة حوالي 12.5 كجم.
- قم بربط القمع عكس اتجاه عقارب الساعة في دعم القمع ، وحدد الزر الفردي أو المزدوج المقابل وفقاً لكوب المرشح المستخدم:


برمجة:

- عندما لا يتم تثبيت صندوق الجوب، يكون مفتاح حبة الطحن للكوب المفرد ومفتاح حبة الطحن المزدوج دائماً باللون الأحمر الفاتح في نفس الوقت.
- عندما لا يمكن استخدام وظيفة الطحن بشكل طبيعي ، يومض مفتاح طحن الكوب الفردي ومفتاح طحن الكوب المزدوج ، مصحوباً بثلاث أصوات تنبيه.
- من أجل حماية نظام طحن الجوب، عندما تستمر وظيفة طحن الجوب لمدة 3 دقائق ويكون وقت التوقف الوسيط أقل من 6 دقائق ، سيقوم النظام باستخدام المادي لوظيفة طحن الجوب. بعد أن يصل الفاصل الزمني إلى 6 دقائق ، سيقوم النظام تلقائياً بتحرير هذا التقييد وسيعود نظام طحن الجوب إلى طبيعته.

تعديل وقت الطحن: يمكن للمستخدم ضبط وقت الطحن بشكل مستقل للضغط على زر طحن الكوب الفردي (أو الكوب المزدوج) لمرة واحدة. طريقة التشغيل المحددة هي الضغط مع الاستمرار على زر طحن الكوب الفردي (أو الكوب المزدوج). في هذا الوقت ، يومض المؤشر المقابل ، وسيتم تشغيل المطحنة. عندما يتم تشغيله إلى الوقت الذي يطلبه المستخدم ، حرر زر طحن الكوب الفردي (أو الكوب المزدوج) ، وحلقات الجرس ، وسيقوم النظام بتسجيل هذه المرة ، في المرة التالية التي تضغط فيها على زر طحن الكوب الفردي (أو الكوب المزدوج) ، سيقوم النظام بتنفيذ الوقت المحدد حديثاً (يسجل النظام فقط الوقت الذي يتجاوز 5 ثوان ، ولا يسجل الوقت أقل من 5 ثوان). في الوقت نفسه ، اضغط مع الاستمرار على مفتاح إعدادات البرنامج + مفتاح طحن الجوب كوب واحد (أو كوب مزدوج) لاستعادة إعداد المصنع لوقت طحن الجوب.

2.تنظيف طاحونة الجوب

أثناء استخدام المطحنة ، سيتم حظر قناة مخرج المسحوق بسبب تأثير جوب البن والعوامل الخارجية. يرجى تنظيف قناة مخرج المسحوق في الوقت المناسب في حالة الظروف التالية

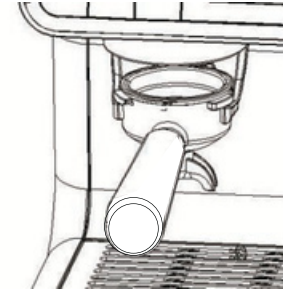

(الشكل 5)

- اضغط على زر طحن كوب واحد ، ستبدأ المطحنة وتتوقف تلقائياً بعد الوصول إلى كمية الطحن المحددة. يمكنك أيضاً تشغيل زر طحن الكوب الفردي للتوقف في المنتصف.
- اضغط على زر طاحونة الكوب المزدوج ، تبدأ المطحنة ، وتتوقف تلقائياً بعد الوصول إلى الكمية المحددة من مسحوق الطحن ، ويمكنك أيضاً تشغيل زر طاحونة الكوب المزدوج للتوقف في المنتصف.
- أخرج القمع ، واطرق القمع على الطاولة ، وقم بمسحوق القهوة مسبقاً في المصفاة.
- اضغط على مسحوق القهوة بقوة حوالي 12.5 كجم.
- قم بربط القمع عكس اتجاه عقارب الساعة في دعم القمع ، وحدد الزر الفردي أو المزدوج المقابل وفقاً لكوب المرشح المستخدم:

برمجة:

- عندما لا يتم تثبيت صندوق الجوب، يكون مفتاح حبة الطحن للكوب المفرد ومفتاح حبة الطحن المزدوج دائماً باللون الأحمر الفاتح في نفس الوقت.
- عندما لا يمكن استخدام وظيفة الطحن بشكل طبيعي ، يومض مفتاح طحن الكوب الفردي ومفتاح طحن الكوب المزدوج ، مصحوباً بثلاث أصوات تنبيه.
- من أجل حماية نظام طحن الجوب، عندما تستمر وظيفة طحن الجوب لمدة 3 دقائق ويكون وقت التوقف الوسيط أقل من 6 دقائق ، سيقوم النظام باستخدام العادي لوظيفة طحن الجوب. بعد أن يصل الفاصل الزمني إلى 6 دقائق ، سيقوم النظام تلقائياً بتحرير هذا التقييد وسيعود نظام طحن الجوب إلى طبيعته.

تعديل وقت الطحن: يمكن للمستخدم ضبط وقت الطحن بشكل مستقل للضغط على زر طحن الكوب الفردي (أو الكوب المزدوج) لمرة واحدة. طريقة التشغيل المحددة هي الضغط مع الاستمرار على زر طحن الكوب الفردي (أو الكوب المزدوج). في هذا الوقت ، يومض المؤشر المقابل ، وسيتم تشغيل المطحنة. عندما يتم تشغيله إلى الوقت الذي يطلبه المستخدم ، حرر زر طحن الكوب الفردي (أو الكوب المزدوج) ، وحلقات الجرس ، وسيقوم النظام بتسجيل هذه المرة ، في المرة التالية التي تضغط فيها على زر طحن الكوب الفردي (أو الكوب المزدوج) ، سيقوم النظام بتنفيذ الوقت المحدد حديثاً (يسجل النظام فقط الوقت الذي يتجاوز 5 ثوان ، ولا يسجل الوقت أقل من 5 ثوان). في الوقت نفسه ، اضغط مع الاستمرار على مفتاح إعدادات البرنامج + مفتاح طحن الجوب كوب واحد (أو كوب مزدوج) لاستعادة إعداد المصنع لوقت طحن الجوب.

2.تنظيف طاحونة الجوب

أثناء استخدام المطحنة ، سيتم حظر قناة مخرج المسحوق بسبب تأثير جوب البن والعوامل الخارجية. يرجى تنظيف قناة مخرج المسحوق في الوقت المناسب في حالة الظروف التالية

1. نظف قناة مخرج المسحوق وعجلة الطحن مرة واحدة على الأقل كل أسبوعين.
2. عندما ينخفض إخراج المسحوق ، يرجى تنظيف قناة إخراج المسحوق وعجلة الطحن.
3. عند استخدام المطحنة لإنهاء طحن مسحوق القهوة الناعم ، يرجى تنظيف قناة المسحوق في الوقت المناسب.
4. تحتوي الآلة على نظام مسحوق مضاد للكهرباء الساكنة ، عندما يطفو مسحوق القهوة خارج القمع ، يرجى استخدام فرشاة لتنظيف موضع عبور المسحوق في الوقت المناسب.

طريقة تنظيف طاحونة حبوب القهوة:

- ملاحظة: عند تنظيف المطحنة ، يرجى التأكد من عدم وجود حبوب في صندوق الحبوب ، والضغط على زر المطحنة ، يمكن أن تعمل المطحنة بشكل طبيعي ، ولا يوجد مسحوق قهوة خارج المخرج.
1. اقلب صندوق الحبوب عكس اتجاه عقارب الساعة وقم بإزالة صندوق الحبوب.
 2. قم بتدوير عجلة الطحن الداخلية عكس اتجاه عقارب الساعة ، وتنظيف عجلة الطحن بفرشاة التنظيف المرفقة ، وإزالة مسحوق القهوة في الشفرات؛ يرجى ملاحظة أنه لا ينبغي غسل عجلة الطاحونة مباشرة بالماء.
 3. استخدم فرشاة التنظيف المرفقة لتنظيف تجويف المطحنة وقناة المخرج.
 4. إن لم تقم بتثبيت عجلة الطحن في هذا الوقت ، فأعد تثبيت صندوق الحبوب الفارغ ، واضغط على زر الطحن ، واترك المطحنة تعمل لمسح المسحوق المتبقي في تجويف حبوب الطحن. (إذا لم يكن كذلك ، كرر الخطوات 3 و 4).
 5. قم بإزالة صندوق الحبوب عكس اتجاه عقارب الساعة ، وقم بتثبيت عجلة حبوب الطحن ، وإنهاء التنظيف.

تذكير إزالة الترسبات

تم تجهيز هذا المنتج بوظيفة تذكير إزالة الترسبات وبرنامج إزالة الترسبات ، والذي يحتاج إلى تعاون المستخدمين في عملية إزالة الترسبات. من المتوقع أن تستغرق العملية الكاملة لتشغيل البرنامج حوالي 10 دقائق.

ملاحظة: عند بدء برنامج إزالة الترسبات ، يرجى التأكد مما يلي:

1. تأكد من وجود 1 لتر على الأقل من الماء في خزان المياه.
 2. أفرغ صينية المياه وقم بتثبيتها في مكانها.
 3. قم بتشغيل الجهاز ووضعه في وضع الاستعداد.
 4. ضع سلة كوب مزدوج في القمع.
 6. يمكن الخروج من وظيفة التنظيف في أي وقت عن طريق الضغط على زر الطاقة .
 7. عند بدء برنامج التنظيف ، سيومض ضوء المؤشر ☺ وضوء مؤشر إزالة الترسبات وموجه ، وسيومض طوال العملية.
 8. إذا لم تبدأ خطوة إزالة الترسبات في غضون 1 دقيقة ، فسيخرج الجهاز من دورة إزالة الترسبات ويعود إلى حالة الاستعداد.
- تعليمات إزالة الترسبات
- يوصى بإزالة الترسبات كل 4-6 أشهر ؛
- يمكن اختيار إزالة الترسبات: (1) آلة القهوة قرص إزالة الترسبات (2) المنظفات السائلة (3) الخل الأبيض والماء الدافئ


دورة إزالة الترسبات

تستغرق دورة إزالة الترسبات حوالي 10 دقائق.


ملاحظة: بعد بدء تذكير إزالة الترسبات أو قبل أن يبدأ المستخدم برنامج إزالة الترسبات ، يرجى إكمال الاستعدادات التالية لإزالة الترسبات قبل تشغيل برنامج إزالة الترسبات!

إعداد إزالة الترسبات

أضف المحلول إلى خزان المياه (اختر إحدى الطرق الثلاث)

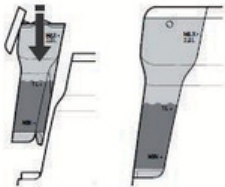

1. املاً 1 لتر من الماء في خزان المياه. أضف أقراص إزالة الترسبات وانتظر حتى يتم إذابة أقراص إزالة الترسبات ؛
 2. أضف نصف كوب من عامل إزالة الترسبات السائلة في خزان المياه ، ثم قم بحقن 1 لتر من الماء الدافئ للسماح للمحلول بالاختلاط جيداً ؛
 - (3) أضف 1.5 ملعقة كبيرة من الخل الأبيض إلى خزان المياه ، ثم احقن 1 لتر من الماء الدافئ للسماح للمحلول بالاختلاط جيداً.
- أدخل خزان المياه في موضعه.

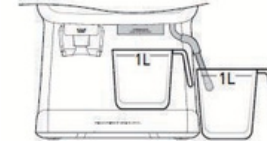

ضع حاوية سعة 1 لتر تحت رأس التخمير وحاوية أخرى سعة 1 لتر أسفل أنبوب البخار

بعد الانتهاء من الخطوات المذكورة أعلاه ، يمكنك البدء في إجراء التنظيف على النحو التالي:

1. عندما يكتشف النظام أن تدفق الجهاز بأكمله يصل إلى 15 لترا ، ستبدأ وظيفة إزالة الترسبات وتدخل تلقائياً في برنامج إزالة الترسبات ؛
 2. في وضع الاستعداد ، اضغط لفترة طويلة على مفتاح القهوة أحادي الكوب + مفتاح القهوة المزدوج الكوب + مفتاح إعداد البرنامج لبدء برنامج إزالة الترسبات.
- عندما يضيء ضوء مؤشر إزالة الأوساخ وضوء مؤشر الطاقة ويومضان ☺ ، يرجى إجراء العمليات التالية:

الخطوة 1: بدء دورة إزالة الترسبات

أدر المقبض ☺ إلى موضعه

- مؤشر البخار / الماء الساخن قيد التشغيل دائماً ، ومؤشر إزالة الترسبات وفلاش ضوء الطاقة ☺
- عندما تبدأ مضخة المياه ، سيتم إطلاق الماء الساخن من رأس التخمير وأنبوب البخار. بعد 2 دقيقة ، ستصدر مضخة المياه أصواتاً مختلفة.
- عندما يتوقف الماء الساخن عن الإطلاق من رأس التخمير وأنبوب البخار ، تكتمل هذه الخطوة وتحول المقبض إلى الموضع • .

الخطوة 2: التحضير للتنظيف

هام: اترك 5 دقائق كحد أقصى لإكمال الخطوات التالية قبل خروج دورة إزالة الترسبات.

- يجب تنظيف قناة البخار ورأس التخمير بالماء العذب لإزالة محلول إزالة الترسبات
- خزان مياه التنظيف • املاً خزان المياه بالماء • حاوية فارغة

الخطوة 3: ابدأ التنظيف

أدر المقبض إلى الموضع ☺ ؛

- مؤشر البخار / الماء الساخن قيد التشغيل دائماً ، ومؤشر إزالة الترسبات ووميض ضوء الطاقة ☺ ؛
- عندما تبدأ مضخة المياه ، سيتم إطلاق الماء الساخن من رأس التخمير وأنبوب البخار. بعد 2 دقيقة ، ستصدر مضخة المياه أصواتاً مختلفة ؛
- عندما يتوقف الماء الساخن عن الإطلاق من رأس التخمير وأنبوب البخار ، تكتمل إزالة الترسبات ويتم تشغيل المقبض إلى الموضع • .

اكتملت دورة إزالة الترسبات

أدر المقبض إلى الموضع • و ☺ ، تضيء في نفس الوقت.

للإشارة إلى اكتمال دورة إزالة الترسبات ، سيصدر الجهاز صوتاً ويتوقف ضوء المؤشر عن الوميض ☺ . سيعود الجهاز إلى وضع الاستعداد.

استكشاف الأخطاء

العلل	السبب	الحل
لا يوجد عرض على الشاشة	تحقق مما إذا كان القابس قد تم إدخاله في مكانه وما إذا كان مفتاح الطاقة مضغوطاً.	قم بتوصيل قابس الطاقة وتأكد من الضغط على مفتاح التشغيل.
توجد علامات ماء في الجزء السفلي من الجهاز	خزان المياه أو وعاء الصنبور غير مثبت بشكل صحيح \ مقلدة الصنبور ممتلئة.	تأكد من تركيب خزان المياه وصندوق طحن المياه بشكل صحيح. إذا تم تركيبها بشكل صحيح ، وتم إفراغ صينية المياه. إذا كنت لا تزال غير قادر على الحل ، فلا تقم بتفكيك الجهاز بشكل خاص ، قم بتسليم الجهاز إلى مركز صيانة ما بعد البيع في بلدك.
بعد بدء تشغيل الجهاز ، يمكنك سماع صوت طنين وصوت هسهسة بعد صنع القهوة	هذه ظاهرة طبيعية وهي الصوت الناتج عن التشغيل العادي لصمام التحكم في الضغط.	
لا ينتج القمع القهوة أو يتدفق قطرة قطرة ، أو لا يمكن تركيب القمع بشكل طبيعي	كمية مسحوق القهوة تتجاوز المعيار ، مسحوق القهوة ناعم جداً أو ضغط الضغط المسحوق مرتفع جداً.	يجب ألا تتجاوز كمية المسحوق المعيار ، ويجب ضبط معدات طحن مطحنة الحبوب بشكل مناسب حتى تصبح مناسبة. لا ينصح بالضغط على المسحوق بشكل متكرر بقوة مفرطة.
القهوة خالية من الدسم	حبوب البن رطبة أو مسحوق القهوة سميك جداً.	اختر حبوب البن الطازجة والمسحوق المطحون بسماعة معتدلة لصنع القهوة.
لا ينتج بخار	لا يتم تسخين وظيفة البخار تماماً ؛ فوهة البخار مسدودة.	يمكن للآلة ضخ البخار فقط بعد تسخين البخار مسبقاً ؛ تحتاج الماكينة إلى إزالة الترسبات الكلسية ويجب تنظيف فوهة البخار بإبرة تنظيف.
بعد خروج البخار ، لا يمكنك صنع القهوة أو الماء الساخن على الفور ، وستقوم الآلة بضخ الماء تلقائياً	بعد ضخ البخار ، يجب إزالة الضغط منه وتبريده. في هذا الوقت ، لا يمكن إجراء أي عملية أخرى. الغرض من ضخ المياه هو تبريد وعاء التسخين بسرعة.	يستغرق 20-30 ثانية لتخفيف الضغط والتبريد. بعد تخفيف الضغط والتبريد ، لا يمكن غلي القهوة أو الماء الساخن إلا بعد عرض المؤشر الموجود على اللوحة بشكل طبيعي.

5. درجة حرارة الاستخراج المخصصة

تحتوي الماكينة على وظيفة التحكم PID ، والتي يمكنها مراقبة كتلة التسخين لتسخين الماء الساخن لاستخراج القهوة عند درجة حرارة حوالي 92 درجة مئوية.

يمكنك ضبط درجة حرارة استخراج القهوة. يتراوح نطاق درجة الحرارة القابل للتعديل بين 90-96 درجة مئوية ، ويتم زيادة كل ترس بمقدار 2 درجة مئوية ، والتي يمكن أن تليي متطلبات الذوق المختلفة.

- عندما تكون درجة الحرارة مرتفعة ، ستزداد المرارة وستنخفض الحموضة.
- عندما تكون درجة الحرارة منخفضة ، ستتنخفض المرارة وستزداد الحموضة.

أدخل وضع تخصيص درجة حرارة الاستخراج

اضغط لفترة طويلة على زر مفتاح الإعدادات  لمدة 4 ثوان تقريباً ، وسيصدر الجهاز صوتاً ، ويبدأ مؤشر إعداد البرنامج في الوميض.

تعريف درجة الحرارة

زر حبوب طحن كوب واحد يتوافق مع 90 درجة مئوية ؛

زر حبوب طحن الكوب المزدوج يتوافق مع 92 درجة مئوية ؛

زر فنجان قهوة واحد يتوافق مع 94 درجة مئوية.

زر فنجان القهوة المزدوج يتوافق مع 96 درجة مئوية.

بادئ ذي بدء ، درجة الحرارة المقابلة للإعداد الأصلي ثابتة. يمكنك تغيير درجة حرارة الاستخراج بالضغط على مفاتيح أخرى ، ويكون المؤشر المقابل ثابتاً. أخيراً ، اضغط على زر إعداد البرنامج لتأكيد الإعداد والعودة إلى حالة الإعداد.

ملاحظة: سيكون مؤشر إعداد البرنامج قيد التشغيل دائماً ، مما يشير إلى أنه في وضع التخصيص.

مهم:

1. بعد الدخول في وضع التخصيص ، إذا لم يتم الضغط على زر في غضون دقيقة واحدة ، فسيخرج الجهاز من الوضع ويعود إلى حالة الاستعداد ؛

2. اضغط على أي زر أثناء العملية للخروج من الإعداد.

6.استعادة إعدادات المصنع

في حالة الإعدادات المضطربة ، يمكن للمستخدم الضغط مع الاستمرار على زر الطاقة + زر مفتاح إعداد البرنامج في نفس الوقت. سيصدر الجهاز صوتاً وستومض جميع المؤشرات لمدة 3 مرات. في هذا الوقت ، سيعود النظام إلى إعداد المصنع.

التنظيف والصيانة

تحذير: يرجى فصله قبل التنظيف وترك آلة القهوة تبرد بدرجة كافية لمنع الحروق. لا تغمر آلة القهوة أو قابس سلك الطاقة في الماء أو السوائل الأخرى لتجنب الخطر.

1. بعد كل استخدام ، ضع جميع الأجزاء القابلة للإزالة في الماء للتنظيف. إذا لزم الأمر ، أضف محلول التنظيف واشطفه بالماء النظيف.

2. غالباً ما تستخدم إسفنجة مقاومة للرطوبة لفرك السطح الخارجي لآلة القهوة لإزالة الأوساخ.

ملاحظة: لا تستخدم الكحول أو المنظفات ، ولا تغمر الجهاز في الماء للتنظيف.

3. أدر في اتجاه عقارب الساعة لإزالة القمع المعدني وإزالة القهوة المطحونة بالداخل. ثم يمكنك تنظيف القمع وملحقات الفلتر المعدني بالمنظفات ، ولكن في النهاية يجب عليك شطفها بالماء النظيف.

4. بعد تنظيف جميع الأجزاء القابلة للإزالة ، امسح جميع الأجزاء حتى تجف.

ملاحظة: لا يمكن وضع خزان المياه القابل للفصل في غسالة الأطباق للتنظيف.

استكشاف الأخطاء

استكشاف الأخطاء

المطل	السبب	الحل
وظيفة الإسبريسو لا يتوقف عن العمل و / أو وظيفة الإسبريسو يعمل بشكل غير متوقع و / أو يخرج الزبد من صنوبر من فلتر القهوة.	قد يحدث هذا بعد تشغيل الجهاز مباشرة أو بعد استخدام وظيفة البخار	يحتاج نظام المياه إلى الوصول إلى درجة حرارة الاستخراج ، قبل يمكن بدء الاستخراج. انتظر حتى تضيق أيقونات الإسبريسو ، قبل محاولة بدء الاستخراج.
	أثناء الاستخراج ، قمت بالتبديل إلى وظيفة البخار أو الماء الساخن	سيتم إنهاء الاستخراج في وقت واحد ، عندما تكون وظيفة أخرى تنشط.
	خزان المياه فارغ.	املاً كمية كافية من الماء في خزان المياه. تأكد دائماً من أن مستوى التعبئة في خزان المياه بين صنع "MIN" و "MAX" ، قبل البدء في أي وظيفة من وظائف الماكينة.
	حجم الطحن جيد جداً.	استخدم فقط مسحوق القهوة مناسبة لآلات الإسبريسو. يوصى باختيار الدرجة 12-15 عند طحن مسحوق الإسبريسو
	مسحوق القهوة مبلل بإحكام شديد	املاً كمية كافية من الماء في خزان المياه. تأكد دائماً من أن مستوى التعبئة في خزان المياه يقع بين صنع "MIN" و "MAX" ، قبل البدء في أي وظيفة من وظائف الماكينة.
تتوقف المطحنة بشكل غير متوقع ولا يمكن تشغيلها مرة أخرى.	يطلب نظام المياه بشدة إزالة الترسبات	قم دائماً بإزالة الترسبات من نظام المياه في الوقت المناسب. إذا كانت صلابة المياه في ماء الصنبور عالية للغاية ، فاستخدم غير الغازية ، مياه مائدة منخفضة المعادن.
	مسام سلة المرشح مسدودة.	نظف الفلتر جيداً سلة. إذا لزم الأمر ، استخدم الإبرة أداة لفتح مسام سلة التصفية.
المطحنة لا تعمل و / أو مؤشر المطحنة (النقطة الموجودة على الجانب الأيسر من الشاشة) مضاء باللون الأحمر و / أو يصدر صوت صفير عند الضغط على زر GRIND ويومض مؤشر النظام.	المطحنة مسدودة	تفكيك وتنظيف المطحنة. إزالة أي عقيبات. (يوجد مرجع فيديو لتنظيف المطحنة ، يرجى الاتصال بخدمة العملاء.)
	مفتت و قادوس الحبوب و / أو قفل الأمان للمطحنة تالف	فقط مع نتوء الغالق وقادوس الحبوب في الاتجاه الصحيح ، يمكنك تثبيت قادوس الحبوب عند الضغط على قفل GRIND للمطحنة بسهولة. لا تستخدم العنف ، عند تثبيت أو إزالة قادوس الحبوب! إذا وجدت ملحقات قفل الأمان مفقودة ، فيرجى الاتصال بالتاجر في الوقت المناسب.
	تعتلت صانعة الفئات في المطحنة	يرجى الاتصال بالتاجر لتقديم الفيديو البديل للاستبدال
انتظر حوالي 10 دقائق. ثم حاول مرة أخرى ، بعد 3 دقائق من التشغيل المستمر ، قم باستراحة لمدة 6 دقائق تقريباً.	أنت تطحن من دون توقف. الحماية من الحرارة الزائدة للمطحنة نشطة	انتظر حوالي 10 دقائق. ثم حاول مرة أخرى ، بعد 3 دقائق من التشغيل المستمر ، قم باستراحة لمدة 6 دقائق تقريباً.

المطل	السبب	الحل
وظيفة الإسبريسو لا يتوقف عن العمل و / أو وظيفة الإسبريسو يعمل بشكل غير متوقع و / أو يخرج الزبد من صنوبر من فلتر القهوة.	قد يحدث هذا بعد تشغيل الجهاز مباشرة أو بعد استخدام وظيفة البخار	يحتاج نظام المياه إلى الوصول إلى درجة حرارة الاستخراج ، قبل يمكن بدء الاستخراج. انتظر حتى تضيق أيقونات الإسبريسو ، قبل محاولة بدء الاستخراج.
	أثناء الاستخراج ، قمت بالتبديل إلى وظيفة البخار أو الماء الساخن	سيتم إنهاء الاستخراج في وقت واحد ، عندما تكون وظيفة أخرى تنشط.
	خزان المياه فارغ.	املاً كمية كافية من الماء في خزان المياه. تأكد دائماً من أن مستوى التعبئة في خزان المياه بين صنع "MIN" و "MAX" ، قبل البدء في أي وظيفة من وظائف الماكينة.
	حجم الطحن جيد جداً.	استخدم فقط مسحوق القهوة مناسبة لآلات الإسبريسو. يوصى باختيار الدرجة 12-15 عند طحن مسحوق الإسبريسو
	مسحوق القهوة مبلل بإحكام شديد	املاً كمية كافية من الماء في خزان المياه. تأكد دائماً من أن مستوى التعبئة في خزان المياه يقع بين صنع "MIN" و "MAX" ، قبل البدء في أي وظيفة من وظائف الماكينة.
تتوقف المطحنة بشكل غير متوقع ولا يمكن تشغيلها مرة أخرى.	يطلب نظام المياه بشدة إزالة الترسبات	قم دائماً بإزالة الترسبات من نظام المياه في الوقت المناسب. إذا كانت صلابة المياه في ماء الصنبور عالية للغاية ، فاستخدم غير الغازية ، مياه مائدة منخفضة المعادن.
	مسام سلة المرشح مسدودة.	نظف الفلتر جيداً سلة. إذا لزم الأمر ، استخدم الإبرة أداة لفتح مسام سلة التصفية.
المطحنة لا تعمل و / أو مؤشر المطحنة (النقطة الموجودة على الجانب الأيسر من الشاشة) مضاء باللون الأحمر و / أو يصدر صوت صفير عند الضغط على زر GRIND ويومض مؤشر النظام.	المطحنة مسدودة	تفكيك وتنظيف المطحنة. إزالة أي عقيبات. (يوجد مرجع فيديو لتنظيف المطحنة ، يرجى الاتصال بخدمة العملاء.)
	مفتت و قادوس الحبوب و / أو قفل الأمان للمطحنة تالف	فقط مع نتوء الغالق وقادوس الحبوب في الاتجاه الصحيح ، يمكنك تثبيت قادوس الحبوب عند الضغط على قفل GRIND للمطحنة بسهولة. لا تستخدم العنف ، عند تثبيت أو إزالة قادوس الحبوب! إذا وجدت ملحقات قفل الأمان مفقودة ، فيرجى الاتصال بالتاجر في الوقت المناسب.
	تعتلت صانعة الفئات في المطحنة	يرجى الاتصال بالتاجر لتقديم الفيديو البديل للاستبدال
انتظر حوالي 10 دقائق. ثم حاول مرة أخرى ، بعد 3 دقائق من التشغيل المستمر ، قم باستراحة لمدة 6 دقائق تقريباً.	أنت تطحن من دون توقف. الحماية من الحرارة الزائدة للمطحنة نشطة	انتظر حوالي 10 دقائق. ثم حاول مرة أخرى ، بعد 3 دقائق من التشغيل المستمر ، قم باستراحة لمدة 6 دقائق تقريباً.

الضمان

معلومات الضمان ضمان محدود لمدة عامين تضمن الشركة المصنعة أنه لمدة عامين من تاريخ الشراء ، سيكون هذا المنتج خاليا من العيوب في المواد والتصنيع. ستقوم الشركة المصنعة ، حسب اختيارها ، بإصلاح أو استبدال هذا المنتج أو أي مكون من مكونات المنتج وجد أنه معيب خلال فترة الضمان. سيتم الاستبدال بمنتج أو مكون جديد أو منتج بديل تم إصلاحه. إذا لم يعد المنتج متاحا ، فقد يتم استبداله بمنتج مماثل بقيمة مساوية أو أكبر. هذا هو الضمان الحصري الخاص بك. لا تحاول إصلاح أو ضبط أي وظائف كهربائية أو ميكانيكية على هذا المنتج. سيؤدي القيام بذلك إلى إبطال هذا الضمان.

هذا الضمان صالح لمشتري التجزئة الأصلي من تاريخ الشراء الأولي بالتجزئة وغير قابل للتحويل. احتفظ بإيصال المبيعات الأصلي. مطلوب إثبات الشراء للحصول على أداء الضمان. لا يحق لتجار الشركة المصنعة أو مراكز الخدمة أو متاجر البيع بالتجزئة التي تباع منتجات الشركة المصنعة تغيير أو تعديل أو تغيير شروط وأحكام هذا الضمان بأي شكل من الأشكال. لا يغطي هذا الضمان التآكل العادي للأجزاء أو التلف الناتج عن أي مما يلي: الاستخدام المهمل أو سوء استخدام المنتج ، أو الاستخدام على جهد أو تيار غير مناسب ، أو الاستخدام المخالف لتعليمات التشغيل ، أو التفكيك ، أو الإصلاح أو التغيير من قبل أي شخص آخر غير الشركة المصنعة أو مركز خدمة الشركة المصنعة المعتمد. علاوة على ذلك ، لا يغطي الضمان: القضاء والقدر ، مثل الحرائق والفيضانات والأعاصير والأعاصير.

ما هي حدود مسؤولية الشركة المصنعة؟ لن تكون الشركة المصنعة مسؤولة عن أي أضرار عرضية أو تبعية ناتجة عن خرق أي ضمان أو شرط صريح أو ضمني أو قانوني.

باستثناء الحد الذي يحظره القانون المعمول به ، فإن أي ضمان ضمني أو شرط من القابلية للتسويق أو الملاءمة لغرض معين يقتصر في المدة على مدة الضمان أعلاه. تخلي الشركة المصنعة مسؤوليتها عن جميع الضمانات أو الشروط أو الإقرارات الأخرى ، الصريحة أو الضمنية أو القانونية أو غير ذلك. لن تكون الشركة المصنعة مسؤولة عن أي أضرار من أي نوع ناتجة عن شراء أو استخدام أو إساءة استخدام أو عدم القدرة على استخدام المنتج بما في ذلك الأضرار العرضية أو الخاصة أو التبعية أو المماثلة أو خسارة الأرباح ، أو عن أي خرق للعقد ، أساسي أو غير ذلك ، أو عن أي مطالبة مرفوعة ضد المشتري من قبل أي طرف آخر. لا تسمح بعض المقاطعات أو الولايات أو الولايات القضائية باستثناء أو تقييد الأضرار العرضية أو التبعية أو القيود المفروضة على مدة استمرار الضمان الضمني ، لذلك قد لا تنطبق عليك القيود أو الاستثناءات المذكورة أعلاه. يمنحك هذا الضمان حقوقا قانونية محددة ، وقد يكون لديك أيضا حقوق أخرى تختلف من مقاطعة إلى أخرى أو من ولاية إلى أخرى أو من ولاية قضائية إلى أخرى. لضمان ضمان المنتج الخاص بك ، يرجى تسجيل منتجك في www.hibrew.com/warranty.

العتل	السبب	الحل
أثناء الاستخراج ، تخرج القهوة في الخارج من الفلتر	لم يتم تثبيت فلتر القهوة بشكل صحيح.	يجب أن يكون مقبض فلتر القهوة بزاوية قائمة على مقدمة الماكينة
	ينسكب مسحوق القهوة في حافة سلة المرشح.	قم بإزالة أي مسحوق قهوة فائض بعناية من حافة سلة المرشحات ، قبل تثبيت فلتر القهوة على رأس الأرض.
	الكثير من مسحوق القهوة في سلة الفلتر	قم بإزالة أي مسحوق قهوة فائض بعناية من حافة سلة المرشحات ، قبل تثبيت فلتر القهوة على رأس الأرض.
	يلتصق مسحوق القهوة بحلقة الختم لرأس المجموعة أو أن حلقة الختم مهترئة أو تالفة أو مفقودة.	نظف مجموعة الفلتر. لتنظيف رأس المجموعة ، استخدم فقط قطعة قماش ناعمة أو فرشاة نايلون ناعمة. إذا كانت المشكلة استمر ، اتصل بمركز خدمة معتمد للفحص والإصلاح. لا تضغط في رأس المجموعة بأي أشياء صلبة أو حادة الحواف.
	مسحوق القهوة مضغوط بإحكام شديد	لا تستخدم الكثير من القوة للدك (12-13 كجم)

إذا لم تجد سبب المشكلة ، يرجى عدم تفكيك الجهاز ، يجب عليك الاتصال بوكالة الصيانة المحلية.



حماية البيئة
يمكنك المساعدة في حماية البيئة!
الالتزام الصارم باللوائح: يرجى وضع المعدات الكهربائية المهملة في محطة النفايات المقابلة للتخلص منها